



# Window Trim Details

## OX-IS, Thermo-Ply, & ISO RED

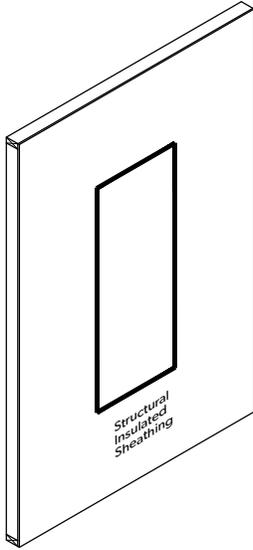


**STEP 1**  
Cut OX-IS panel with approved tools to appropriate window rough opening size

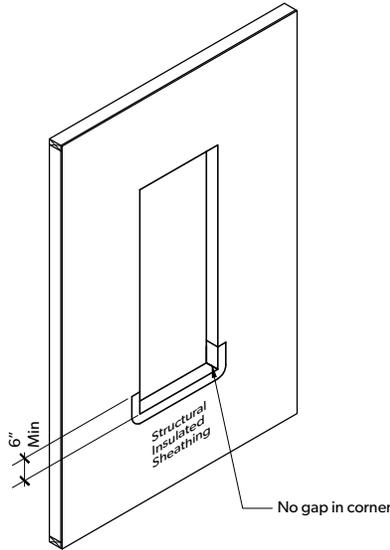


**STEP 2**  
Install formable sill flashing per manufacturer's specifications-cut at least 12" longer than width of rough opening. Fan out formable sill flashing at bottom onto face of wall.

Self-adhered membrane flashing or manufactured rigid pan flashing w/built in back dam may be used in lieu of formable flashing - install per manufacturer's specifications.


**Door installation:**  
Sill pan may be used in lieu of self-adhered membrane flashing. Install sill pan per manufacturer's specifications.

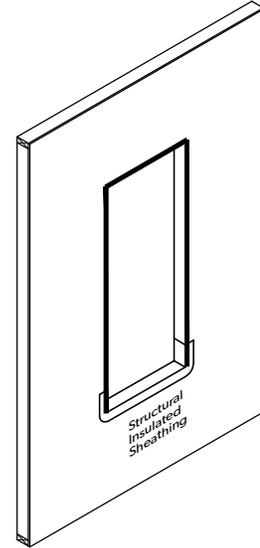


**STEP 3**  
Apply approved sealant on three sides (jamb & head)

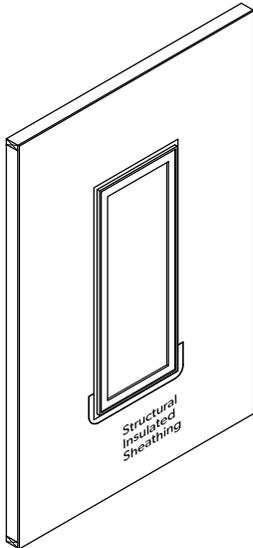

**STEP 4**  
Install window/door per manufacturer's specifications

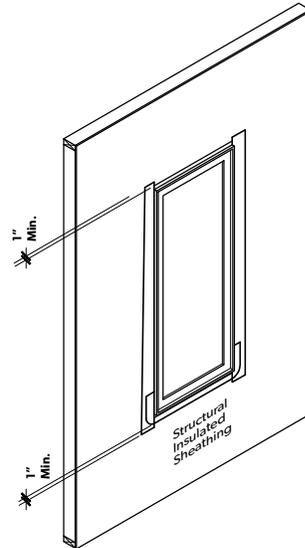

**STEP 5**  
Apply self-adhered flashing Sides of window flange & overlap sill flashing

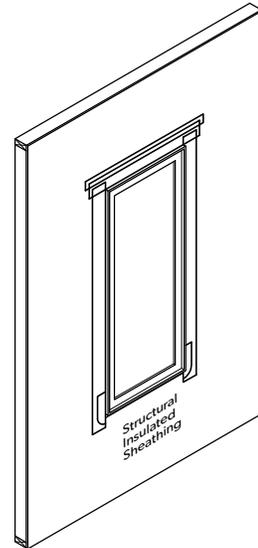

**STEP 6**  
Apply self-adhered flashing for head flashing – long enough to extend beyond outer edges of jamb flashing

Apply additional layer of 2-1/2" construction tape over head flashing to create shedding effect

Air seal window around entire perimeter on the interior with non-expanding foam